

COMPONENT COVERAGE GUIDE



Enjoy peace of mind
with superior benefits
and protection



Security+Plus[®]



Security+Plus[®]

Protect Your Investment

The price for parts and labor to repair many major vehicle components can be significant. One repair bill after your factory warranty expires can easily exceed the cost of your Nissan-backed Security+Plus Extended Protection Plan. It's clear that our coverage plan can quickly pay for itself!

Service You Can Trust with superior parts and service designed exclusively for your vehicle

- **Genuine Nissan Parts¹** specifically engineered for Nissan vehicles to maximize performance and reliability
- **Advanced Diagnostics** equipment designed for Nissan keeps your vehicle running at its best
- **Factory-trained Technicians** ensure the best service possible
- **Nationwide Repairs** at any authorized Nissan dealership


¹ Replacement of any part will be made with a new or remanufactured Genuine Nissan or Nissan-approved replacement part in use at the time of repair.

² Towing and Emergency Roadside Assistance benefits under a Security+Plus VSC are not available if sold by a California Dealer.

³ Should you have a mechanical breakdown of a covered component.

24-Hour Emergency Roadside Assistance²

- **"Sign and Drive" Service** up to \$100 per claim with no deductibles for the services shown to the right or for dispatch towing service

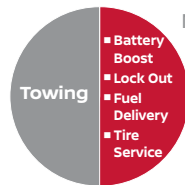

Nearly 50% of all Roadside Assistance calls are due to non-mechanical issues.

Trip Interruption²

- **Reimbursement** up to \$500 for alternate transportation, meals and lodging when you are 100 miles or more from home³

Car Rental Assistance

- **Reimbursement** for actual expenses of substitute transportation up to \$42/day, to a maximum of five (5) days, and \$210 per breakdown³

Towing²

- **Reimbursement** for towing to the nearest authorized Nissan dealer up to \$100 per claim³

Customer Assistance

- **Throughout the United States** at any Nissan dealer or by calling 800-NISSAN-1



Security+Plus[®]

Want MaximuM Protection?

Choose Gold Preferred[™] Coverage

98% of Security+Plus[®] customers do!

Gold Preferred coverage delivers the ultimate peace-of-mind protection for your new or pre-owned Nissan.

The CPO/Certified Select Wrap upgrade offers the same coverage as Gold Preferred, too.

Unparalleled value from your Nissan dealer

www.nissanusa.com/Security+Plus

Component Coverage

VEHICLE SYSTEMS

| VEHICLE SYSTEMS | Gold Pref & Wrap | Silver Pref | Powertrain Pref | CPO/ Certified Select LW |
|------------------------------------|------------------|---------------|-----------------|--------------------------|
| Engine | 428 | 319 | 259 | 167 |
| Transmission/Transfer Case | 445 | 377 | 348 | 341 |
| Drive Axle (FWD/RWD/AWD) | 110 | 104 | 102 | 98 |
| Hybrid/Electric Vehicle | 75 | 56 | 29 | 28 |
| Brakes | 111 | 59 | 21 | 0 |
| Electrical | 300 | 244 | 23 | 0 |
| Fuel System | 86 | 54 | 33 | 0 |
| Steering | 101 | 72 | 52 | 0 |
| Suspension | 123 | 70 | 66 | 0 |
| Air Conditioning/Heater | 131 | 84 | 20 | 0 |
| Body & Interior | 291 | 106 | 0 | 0 |
| Advanced Driver Assistance Systems | 50 | 31 | 0 | 0 |
| Infotainment | 72 | 70 | 0 | 0 |
| TOTAL | 2,320+ | 1,640+ | 950+ | 630+ |

ADVANCED DRIVER ASSISTANCE SYSTEMS

| VEHICLE SYSTEMS | Gold Pref & Wrap | Silver Pref | Powertrain Pref | CPO/ Certified Select |
|---|------------------|-------------|-----------------|-----------------------|
| CONTROL-ASSIST-INTELLIGENT CRUISE CONTROL | 18925 | | | |
| CONTROL-ASSIST-WARNING SENS | 25125 | | | |
| SWITCH ASSY - BSW | 25126 | | | |
| ICC BRAKE HOLD RELAY | 25184 | | | |
| ICC STEERING SWITCH | 25185 | | | |
| ICC BRAKE SWITCH | 25186 | | | |
| SWITCH-STEERING WHEEL PRO PILOT | 25560 | | | |
| FRONT REAR TORQUE BRUZZER | 25560 | | | |
| BUZZER-SONAR BUZZER | 25560 | | | |
| SONAR ROAD SENSOR | 25965 | | | |
| SWITCH-SONAR OFF-PARKING(SONAR) | 25968 | | | |
| SONAR SWITCH ASSY | 25989 | | | |
| FRONT SONAR SENSOR | 25993 | | | |
| FRONT-FOOTER SONAR SENSOR | 25994 | | | |
| REAR SONAR SENSOR NS | 25996 | | | |
| REAR-SONAR FRONT SIDE | 25998 | | | |
| SENSOR-SONAR REAR SIDE | 25999 | | | |
| BUZZER ASSY-LKS / LDW | 26349 | | | |
| WARNING CHIME/BUZZER | 26350 | | | |
| ICC WARNING CHIME | 26553 | | | |
| REAR-SONAR BUZZER | 26620 | | | |
| CONTROL-ASSY-BACKVIEW | 28262 | | | |
| CONT ASSY CAMERA | 28262 | | | |
| UNIT-CONTROL-HD MAP | 28249 | | | |
| CAMERA ASSY-SIDE VIEW | 28248 | | | |
| VEHICLE DATA TRANSMITTER ASSY | 28420 | | | |
| CONTROL UNIT-CHASSIS | 28420 | | | |
| ADAS CONTROLLER | 28427 | | | |
| BSW CONTROL ASSY | 28428 | | | |
| CONTROL MODULE - BUZZER/DRIVER ASSISTANT | 28429 | | | |
| SIDE OBSTACLE WARNING SENSOR | 28430 | | | |
| SENSOR INT-INTRUDE | 28436 | | | |
| SENSOR ASSY - DISTANCE, ICC | 28437 | | | |
| REAR DISTANCE SENSORS | 28442 | | | |
| CAMERA ASSY-BACK VIEW | 28442 | | | |
| CAMERA ASSY - LKS / LDW | 28443 | | | |
| CAMERA ASSY-MIRROR/SMART ROOM | 28445 | | | |
| REAR SONAR SENSOR BRACKET | 28452 | | | |
| CONTROL MODULE BSW | 28456 | | | |
| REAR VIEW CONTROL ASSY | 28461 | | | |
| SOLENOID VALVE ASSY-BACK VIEW CAMERA | 28479 | | | |
| CONTROL ASSY-CAN GATEWAY | 28481 | | | |
| SOLENOID VALVE ASSY - BACK VIEW CAMERA | 28489 | | | |
| CONTROL UNIT-SONAR SENSOR | 28875 | | | |
| TUBE ASSY - WASHER REAR VIEW CAMERA | 28952 | | | |
| REAR CAMERA ACTUATOR | 28941 | | | |
| LANE KEEP CAMERA | 28962 | | | |
| SIDE OBSTACLE WARNING SENSOR ASSY | 28940 | | | |
| REAR VIEW CAMERA KT | AA158 | | | |

AIR CONDITIONER/HEATER

| VEHICLE SYSTEMS | Gold Pref & Wrap | Silver Pref | Powertrain Pref | CPO/ Certified Select |
|--|------------------|-------------|-----------------|-----------------------|
| COMPRESSOR BOLT | 17190 | | | |
| CONTROL UNIT-HEATER | 17190 | | | |
| RESERVOIR TANK CAP-HEATER | 21712 | | | |
| TEMPERATURE SENSOR | 22656 | | | |
| REAR HEATER CONTROL | 25207 | | | |
| BLOWER MOTOR RELAY | 25208 | | | |
| HEATER RELAY | 25214 | | | |
| A/C REAR HEATER | 25218 | | | |
| REAR HEATER AIR CONDITIONER | 25225 | | | |
| FAN MOTOR RELAY | 25246 | | | |
| MAX COOL DOOR RELAY | 25257 | | | |
| REAR HEATER RELAY | 25274 | | | |
| RELAY - AFS | 25295 | | | |
| CONTROL-REAR HEATER, FRONT | 25307 | | | |
| HIGH PUMP UNIT | 27009 | | | |
| REAR HEATER CORE | 27013 | | | |
| REAR HEATER MOTOR | 27014 | | | |
| HEATER & A/C CONTROL | 27030 | | | |
| VACUUM SELECTOR VALVE | 27031 | | | |
| A/C CONTROL | 27032 | | | |
| CONTROL CABLE | 27032 | | | |
| A/C HARNESS | 27038 | | | |
| A/C SWITCH | 27061 | | | |
| BLOWER CASE/HOUSING | 27065 | | | |
| BLOWER MOTOR & FAN | 27070 | | | |
| HEATER CONNECTOR | 27071 | | | |
| HEATER SWITCH RESISTOR | 27077 | | | |
| VACUUM MOTOR | 27084 | | | |
| VACUUM TANK | 27084 | | | |
| VACUUM WATER COCK | 27090 | | | |
| VACUUM CHECK VALVE | 27096 | | | |
| HEATER CORE | 27115 | | | |
| HEATER COIL | 27116 | | | |
| CONTROL CABLE | 27121 | | | |
| NOZZLE ACTUATOR ASSY | 27161 | | | |
| PTC HEATER ASSY | 27163 | | | |
| PIPE ASSY-HEATER | 27164 | | | |
| BLOWER CONTROL AMPLIFIER | 27150 | | | |
| REAR HEATER RESISTOR | 27178 | | | |
| DEFOSTER HOSE | 27181 | | | |
| HEATER TUBE | 27185 | | | |
| THERMISTOR | 27322 | | | |
| AMPLIFIER-THERMO CONTROL | 27330 | | | |
| REAR BLOWER MOTOR | 27375 | | | |
| FAN IMPELLER | 27383 | | | |
| RESERVOIR CONTROL UNIT | 27402 | | | |
| EVAPOATOR | 27410 | | | |
| REAR A/C HIGH TUBE ASSY | 27413 | | | |
| REAR A/C LOW TUBE ASSY | 27414 | | | |
| CASE ASSEMBLY | 27415 | | | |
| REAR COOLING UNIT ASSY | 27416 | | | |
| AIR PURIFIER CONTROL | 27427 | | | |
| CONTROL ASSEMBLY | 27427 | | | |
| AIR PURIFIER COMP | 27452 | | | |
| DRAIN HOSE | 27619 | | | |
| EVAPOATOR | 27621 | | | |
| SWITCH-HIGH PRESSURE | 27623 | | | |
| EXPANSION VALVE | 27625 | | | |
| CONDENSER ASSY | 27626 | | | |
| RADIATOR FAN CONTROL AMP | 27651 | | | |
| ELECTRIC A/C UNIT | 27655 | | | |
| RECEIVER DRIER | 27640 | | | |
| LOW PRESSURE SWITCH | 27648 | | | |
| CONDENSOR | 27650 | | | |
| CONDENSOR FAN & MOTOR | 27651 | | | |
| CONDENSER HANDLE | 27652 | | | |
| SUCTION THROTTLE VALVE | 27660 | | | |
| SWITCH-REAR A/C | 27665 | | | |
| SIDE VENT DUCT | 27670 | | | |
| ACCELERATION CUT SWITCH | 27671 | | | |
| COOLER PIPE | 27677 | | | |
| CAP | 27680 | | | |
| VACUUM LOCK-OUT SWITCH | 27685 | | | |
| FLOOR DUCT SENSOR | 27700 | | | |
| VENTILATOR DUCT SENSOR | 27701 | | | |
| DEFOSTER NOZZLE SENSOR | 27702 | | | |
| SUNLOAD SENSOR | 27705 | | | |
| SENSOR GRILLE | 27706 | | | |
| AIR FILTER SENSOR | 27708 | | | |
| SENSOR-PEFRIGANT TEMP. COMPRESSURE DISCHARGE | 27710 | | | |
| VACUUM HOSE | 27711 | | | |
| SENSOR-LINE TEMPRTH HEATER OUTLET | 27712 | | | |
| SENSOR-OPTICAL | 27715 | | | |
| FAN CONTROL AMPLIFIER | 27717 | | | |
| INTAKE SENSOR | 27723 | | | |
| ASPIRATOR | 27726 | | | |
| IN-VEHICLE SENSOR | 27727 | | | |
| DUCT - ASPIRATOR | 27728 | | | |
| COMPRESSOR SHAFT SEAL | 27735 | | | |
| WATER TEMP SENSOR | 27732 | | | |
| BI-LEVEL MOTOR ACTUATOR | 27736 | | | |
| FEEDBACK RESISTOR (PBR) | 27738 | | | |
| AIR MIX DOOR ACTUATOR | 27740 | | | |
| DOUBLE SOLENOID VACUUM VALVE | 27741 | | | |
| WATER TUBE CLUTCH | 27742 | | | |
| SNAP RING | 27744 | | | |
| ACTUATOR - DEFOSTER DOOR | 27747 | | | |
| ACTUATOR-DRIVER SIDE, AIR MIX DOOR | 27748 | | | |
| ACTUATOR-DRIVER SIDE, INTAKE DOOR | 27749 | | | |
| TRANSISOR-POWER | 27750 | | | |
| ASPIRATOR FAN | 27752 | | | |
| ACTUATOR-DRIVER DUCT | 27753 | | | |
| SENSOR-AMBIENT AIR TEMP | 27757 | | | |
| AUTO TEMP CNTRL UNIT | 27762 | | | |
| UNIT-CONTROL-HEAT PUMP | 27763 | | | |
| SUNLOAD SENSOR AMPLIFIER | 27764 | | | |
| SHFT ACTUATOR VALVE | 27765 | | | |
| REAR FLOOR HEATER DUCT | 27762 | | | |
| AUTO AIR CONTROL AMPLIFIER | 28520 | | | |
| MAGNETIC CLUTCH AMPLIFIER | 28525 | | | |
| SEAL-CONDENSER SIDE | 91284 | | | |
| VALVE-EXPANSION | 92200 | | | |
| SUPER HEAT SWITCH | 92310 | | | |
| THERMAL PROTECTOR | 92316 | | | |
| ACCELERATION/TIMER | 92340 | | | |
| SUPER HEAT TIMER | 92340 | | | |
| HOSE - HEATER, INLET | 92401 | | | |
| HOSE - FRONT HEATER | 92420 | | | |
| HOSE ASSY - REAR HEATER, INLET | 92420 | | | |
| REAR HEATER TUBE | 92433 | | | |
| HEAT EXCHANGER, HIGH | 92440 | | | |
| HEAT EXCHANGER | 92446 | | | |
| REAR COOLER PIPE (REAR) | 92460 | | | |
| REAR COOLER ASSY (FRONT) | 92462 | | | |
| REAR HIGH/LOW COOLER PIPE | 92471 | | | |
| LOW PRESSURE FLEXIBLE HOSE | 92480 | | | |
| HIGH PRESSURE FLEXIBLE HOSE | 92516 | | | |
| COMPRESSOR RPM SENSOR | 92855 | | | |
| C-SENSOR ASSY NS | 98805 | | | |

BODY & INTERIOR

| VEHICLE SYSTEMS | Gold Pref & Wrap | Silver Pref | Powertrain Pref | CPO/ Certified Select |
|-----------------------------------|------------------|-------------|-----------------|-----------------------|
| LOCK-LID-CHARGE PORT | 25644 | | | |
| LOCK-ASSY-ECO MODE | 25651 | | | |
| SWITCH ASSY - AIR CONTROL, SEAT | 25715 | | | |
| BACK DOOR LOCK ACTUATOR | 25189 | | | |
| SUN ROOF SLIDE SWITCH | 25191 | | | |
| SUN ROOF RELAY | 25192 | | | |
| MIRROR HEAT RELAY | 25200 | | | |
| REAR WINDOW OPENER | 25209 | | | |
| REAR DOOR HANDLE OPENER CANCEL | 25211 | | | |
| RELAY, TOP STYL RR LOCK OPENER | 25212 | | | |
| RELAY, TRUNK LD OPENER | 25213 | | | |
| RELAY, TRUNK LD OPEN. CANCEL | 25221 | | | |
| BODY SONIC RELAY | 25248 | | | |
| SWITCH - LMT, REAR HATCH | 25256 | | | |
| SWITCH - LMT, ROOF REAR | 25267 | | | |
| REAR DOOR HATCH OPENER SWITCH | 25271 | | | |
| STORAGE OPENER SWITCH | 25383 | | | |
| SWITCH - TRUNK OPENER CANCEL | 25385 | | | |
| SWITCH - ROOF OPENER | 25465 | | | |
| SWITCH-SEAT MEMORY | 25491 | | | |
| SWITCH-SEAT MEMORY CANCEL | 25492 | | | |
| SWITCH-SEATING RELAY | 25504 | | | |
| PWR FOLD SEAT SWITCH NS | 25502 | | | |
| SPIRAL CABLE | 25554 | | | |
| REMOTE MIRROR SWITCH | 25575 | | | |
| SWITCH - 3RD SEAT RECLINING | 25940 | | | |
| SWITCH-SEAT MEMORY | 25942 | | | |
| REAR WIPER ARM | 26390 | | | |
| MOTOR-LFT 3RD ROW | 26390 | | | |
| WASHER NOZZLE | 27460 | | | |
| REAR WASHER NOZZLE | 27460 | | | |
| WASHER TUBE | 27460 | | | |
| REAR WASHER TUBE | 27470 | | | |
| WIPER WASHER TUBE | 27480 | | | |
| FRONT WASHER TANK | 27499 | | | |
| HOSE ASSY-DRAIN, RR | 27999 | | | |
| BACK DOOR LOCK CONTROL UNIT | 28451 | | | |
| SONAR-LIFT-3RD ROW | 28477 | | | |
| POWER SEAT CONTROL UNIT | 28565 | | | |
| CONTROL UNIT-2ND SEAT | 28568 | | | |
| CABLE-SEAT BACK RELEASE | 36529 | | | |
| SLIDER/TRUNK LD INSIDE RELEASE | 46526 | | | |
| CLUTCH PEDAL | 46540 | | | |
| HOOD HINGE | 46540 | | | |
| HOOD STAY | 46570 | | | |
| HOOD LOCK | 65601 | | | |
| FRONT LID LOCK CABLE | 66421 | | | |
| BASE-CHARGE PORT | 65712 | | | |
| LOCK ASSY-OUTER LID/CHG PORT | 65720 | | | |
| THEFT WARNING PIN SWITCH | 68542 | | | |
| SUN ROOF FRAME/SEAL | 73660 | | | |
| SUN ROOF MOTOR GUIDE BRACKET | 73670 | | | |
| SUN ROOF LIMIT SWITCH | 73683 | | | |
| SUN ROOF MOTOR | 73685 | | | |
| SUN ROOF STRIKER | 73812 | | | |
| FEMALE LOCK | 73820 | | | |
| ROOF PANEL HINGE | 73860 | | | |
| SEAT BELT ANCHOR | 73876 | | | |
| DEAN (W/INCHROOF) | 73880 | | | |
| TRUNK LID (NO SHROOF) | 74830 | | | |
| TRUNK LID ANCHOR STAY | 74835 | | | |
| REAR SEAT BACK CENTER SUPPORT | 76730 | | | |
| REAR SEAT WINDOW HINGE | 76829 | | | |
| REAR SEAT WINDOW HANDLE | 76870 | | | |
| FINSHER - ROOF FRONT LATCH | 79910 | | | |
| UPPER AIR GUIDE | 80430 | | | |
| REAR WINDOW CUP HOLDER | 80430 | | | |
| FUEL FILLER ID OPENER | 78826 | | | |
| FUEL LID ACTUATOR | 78852 | | | |
| REAR WINDOW MOTOR REGULATER | 79871 | | | |
| FINSHER-REAR PARCEL SHELF SIDE LH | 79910 | | | |
| FINSHER-REAR PARCEL SHELF SIDE RH | 79911 | | | |
| REAR HATCH BRACKET | 80220 | | | |
| REAR HATCH BRACKET ASSY | 80226 | | | |
| FRONT DOOR HINGE | 80430 | | | |
| DOOR STOPPER LINK | 80430 | | | |
| FRONT LOCK ASSY | 80502 | | | |
| REMOTE CONTROL ROD | 80512 | | | |
| CLIP | 80520 | | | |
| FRONT REVER | 80520 | | | |
| LOCK STRIKER | 80570 | | | |
| LOCK KNOB | 80595 | | | |
| LOCK CYLINDER | 80600 | | | |
| FRONT OUTSIDE HANDLE | 80605 | | | |
| HANDLE ROD | 80608 | | | |
| FRONT INTRUSION HANDLE | 80620 | | | |
| FRONT WINDOW HANDLE | 80700 | | | |
| FRONT REGULATER MOTOR | 80730 | | | |
| HOOK-SUNSHADE | 82245 | | | |
| LATCH FINSHER-SLIDE WINDOW | 82347 | | | |
| FRONT DOOR HINGE | 82360 | | | |
| UPPER STOPPER | 82440 | | | |
| LOWER STOPPER | 82442 | | | |
| UPPER MALE DOVETAIL | 82470 | | | |
| UPPER FEMALE DOVETAIL | 82472 | | | |
| SLIDER MALE DOVETAIL | 82474 | | | |
| | | | | |

ENGINE (cont.)

| | | COLD Pref & W/rop | SILVER Pref | POWERTRAIN Pref CPO/Certified Select |
|---|-------|-------------------|-------------|---|
| SUB RADIATOR PIPES/HOSES | 21504 | ■ | ■ | ■ |
| HEV UNIT WATER HOSE | 21505 | ■ | ■ | ■ |
| PUMP HOSE ASSY | 21507 | ■ | ■ | ■ |
| CONVERTER HOSE ASSY | 21508 | ■ | ■ | ■ |
| RESERVOIR TANK | 21510 | ■ | ■ | ■ |
| RESERVOIR TANK BRACKET | 21511 | ■ | ■ | ■ |
| SUB RAD RESERVOIR TANK | 21512 | ■ | ■ | ■ |
| PIPE ASSY - CONVERTER INLET | 21513 | ■ | ■ | ■ |
| HOSE - CONVERTER OUTLET | 21514 | ■ | ■ | ■ |
| RESERVOIR TANK HOSE | 21515 | ■ | ■ | ■ |
| PIPE ASSY - CONVERTER INLET | 21516 | ■ | ■ | ■ |
| PUMP HOSE ASSY | 21517 | ■ | ■ | ■ |
| HOSE-UPPER, SUB RADIATOR | 21525 | ■ | ■ | ■ |
| HOSE-LOWER, SUB RADIATOR | 21526 | ■ | ■ | ■ |
| HOSE INVERTER OUTLET | 21534 | ■ | ■ | ■ |
| PIPE-PUMP INLET | 21537 | ■ | ■ | ■ |
| ELECTRIC WATER PUMP | 21580 | ■ | ■ | ■ |
| MOTOR ASSY WATER PUMP | 21581 | ■ | ■ | ■ |
| THERMO SWITCH | 21595 | ■ | ■ | ■ |
| RADIATOR FAN MOTOR | 21597 | ■ | ■ | ■ |
| TUBE ASSY | 21620 | ■ | ■ | ■ |
| OIL COOLER PIPING | 21636 | ■ | ■ | ■ |
| TRANSISTOR IGNITION UNIT | 22026 | ■ | ■ | ■ |
| EGR WATER TEMP SENSOR | 22120 | ■ | ■ | ■ |
| VACUUM GALLERY | 22310 | ■ | ■ | ■ |
| VIAS VENT HOSE | 22320 | ■ | ■ | ■ |
| HOSE - VACUUM | 22321 | ■ | ■ | ■ |
| SENSOR-TEMPERATURE,CHARGE AIR COOLER OUTLET PRESSURE | 22350 | ■ | ■ | ■ |
| SENSOR-TEMPERATURE,CHARGE AIR COOLER OUTLET | 22351 | ■ | ■ | ■ |
| BOOST SENSOR | 22364 | ■ | ■ | ■ |
| EGR VACUUM CONTROL VALVE | 22365 | ■ | ■ | ■ |
| ABSOLUTE PRESSURE SENSOR | 22366 | ■ | ■ | ■ |
| IGNITION COIL/PWR TRANSISTOR | 22433 | ■ | ■ | ■ |
| HIGH TENSION CABLE | 22450 | ■ | ■ | ■ |
| RESISTOR | 22460 | ■ | ■ | ■ |
| IGNITION COIL PROTECTOR | 22465 | ■ | ■ | ■ |
| AIR CUT VALVE | 22622 | ■ | ■ | ■ |
| SCV SENSOR ASSY | 22623 | ■ | ■ | ■ |
| FR EXHAUST TEMP GAS SENSOR | 22624 | ■ | ■ | ■ |
| FUEL TEMP SENSOR | 22629 | ■ | ■ | ■ |
| TANK FUEL TEMPERATURE SENSOR | 22634 | ■ | ■ | ■ |
| FUEL DAMPER | 22675 | ■ | ■ | ■ |
| AIR FUEL RATIO SENSOR | 22689 | ■ | ■ | ■ |
| ECC MAIN RELAY | 22698 | ■ | ■ | ■ |
| DROPPING RESISTOR | 22699 | ■ | ■ | ■ |
| ALTERNATOR | 23100 | ■ | ■ | ■ |
| ALTERNATOR ROTOR | 23108 | ■ | ■ | ■ |
| ALTERNATOR BEARING | 23120 | ■ | ■ | ■ |
| ALTERNATOR BRUSH & HOLDER | 23133 | ■ | ■ | ■ |
| ALTERNATOR PULLEY | 23150 | ■ | ■ | ■ |
| IC VOLTAGE REGULATOR | 23215 | ■ | ■ | ■ |
| STARTER MOTOR ASSY | 23300 | ■ | ■ | ■ |
| FIELD COIL | 23306 | ■ | ■ | ■ |
| ARMATURE | 23310 | ■ | ■ | ■ |
| CLUTCH PINION | 23312 | ■ | ■ | ■ |
| REDUCTION GEAR | 23313 | ■ | ■ | ■ |
| STARTER SOLENOID | 23343 | ■ | ■ | ■ |
| BRUSH | 23380 | ■ | ■ | ■ |
| CRANKSHAFT POS. SENSOR (OBD POS) | 23731 | ■ | ■ | ■ |
| CRANKSHAFT POS. SENSOR (REF) | 23732 | ■ | ■ | ■ |
| SENSOR-IDLE STOP | 23737 | ■ | ■ | ■ |
| VVL ACTUATOR ASSY | 23745 | ■ | ■ | ■ |
| IVTC POSITION SENSOR NS | 23750 | ■ | ■ | ■ |
| MOTOR ASSY - ACTUATOR | 23753 | ■ | ■ | ■ |
| CONTROL UNIT-ELECTRIC VALVE TIMING | 23754 | ■ | ■ | ■ |
| VTC-ELECTRIC | 23756 | ■ | ■ | ■ |
| VTC ASSY-ELECTRIC | 23757 | ■ | ■ | ■ |
| MODULE-VCR CONTROL | 23780 | ■ | ■ | ■ |
| VTC SOLENOID ASSY | 23796 | ■ | ■ | ■ |
| ENGINE SUB HARNESS | 24079 | ■ | ■ | ■ |
| BATTERY VENT TUBE | 24413 | ■ | ■ | ■ |
| BATTERY VENT TUBE | 24414 | ■ | ■ | ■ |
| BATTERY FRAME/TRAV/ROD | 24428 | ■ | ■ | ■ |
| EGR CONTROL UNIT | 25024 | ■ | ■ | ■ |
| FUEL TANK SENSOR | 25060 | ■ | ■ | ■ |
| COOLANT TEMP SENSOR | 25080 | ■ | ■ | ■ |
| SENSOR-WATER LEVEL | 25083 | ■ | ■ | ■ |
| EVAP CONTROL, SYST PRESS SENSOR | 25086 | ■ | ■ | ■ |
| RADIATOR FAN RELAY | 25217 | ■ | ■ | ■ |
| OIL PRESSURE SENDING UNIT | 25240 | ■ | ■ | ■ |
| OIL PRESSURE SWITCH | 25244 | ■ | ■ | ■ |
| COOLING FAN CONTROL | 25305 | ■ | ■ | ■ |
| EGR RESERVOIR TANK | 27085 | ■ | ■ | ■ |
| 221-WATER CONTROL COCK | 27117 | ■ | ■ | ■ |
| FLYWHEEL HOUSING NS | 32040 | ■ | ■ | ■ |
| ELECTRO HYDRAULIC CNT | 32081 | ■ | ■ | ■ |
| PLUG ASSY-DRAIN | 32105 | ■ | ■ | ■ |
| PLUG ASSY-DRAIN | 32111 | ■ | ■ | ■ |
| PRESSURE TUBE | 46545 | ■ | ■ | ■ |
| QUICK CONNECTOR ASSY AIR PRESSURE TUBE | 45456 | ■ | ■ | ■ |
| SENSOR-TURBOCHARGER SPEED | 59126 | ■ | ■ | ■ |
| BRACKET ASSY-CHARGE PORT | 62551 | ■ | ■ | ■ |
| ENGINE MOUNTING BRACKET | 75117 | ■ | ■ | ■ |
| ADAPTER-FILTER HEAD | 78323 | ■ | ■ | ■ |
| VACUUM HOSE | 90004 | ■ | ■ | ■ |
| VALVE ASSY WATER | 92231 | ■ | ■ | ■ |
| TUBE-BOOST SENSOR | 97195 | ■ | ■ | ■ |
| INSULATOR-INTAKE PORT | 11020 | ■ | ■ | ■ |
| INSULATOR-REAR MOTOR MOUNT, FRONT | 11211 | ■ | ■ | ■ |
| SENSOR ASSY - TURBO SPEED | 14443 | ■ | ■ | ■ |
| TURBO MOUNTING KIT, REMAN | 14401 | ■ | ■ | ■ |

FUEL SYSTEM

| | | COLD Pref & W/rop | SILVER Pref | POWERTRAIN Pref CPO/Certified Select |
|--|-------|-------------------|-------------|---|
| FAST FLOW CONTROL UNIT | 11067 | ■ | ■ | ■ |
| VALVE ASSY - INTAKE BYPASS | 14466 | ■ | ■ | ■ |
| HOSE - AIR, SUCTION | 14468 | ■ | ■ | ■ |
| POWER VALVE SOLENOID VALVE ASSY | 14517 | ■ | ■ | ■ |
| VACUUM PUMP ASSY | 14650 | ■ | ■ | ■ |
| EXHAUST TEMP SENSOR | 14730 | ■ | ■ | ■ |
| BPT VALVE | 14741 | ■ | ■ | ■ |
| A.I.V. UNIT CASE | 14810 | ■ | ■ | ■ |
| PUMP ASSY-AIR | 14812 | ■ | ■ | ■ |
| A.I.V. TUBE | 14821 | ■ | ■ | ■ |
| AIR INJECTION PIPE | 14823 | ■ | ■ | ■ |
| VALVE ASSY- AIR CUT SOLENOID | 14830 | ■ | ■ | ■ |
| AIR CONTROL VALVE | 14832 | ■ | ■ | ■ |
| A.B. VALVE | 14835 | ■ | ■ | ■ |
| AIR INJECTION VALVE | 14854 | ■ | ■ | ■ |
| HOSE ASSY-AIR | 14858 | ■ | ■ | ■ |
| EC-HOSE | 14860 | ■ | ■ | ■ |
| CONNECTOR-HOSE,3WAY | 14877 | ■ | ■ | ■ |
| CONNECTOR-HOSE | 14879 | ■ | ■ | ■ |
| A.I.V. BOX | 14880 | ■ | ■ | ■ |
| TUBE-EVAP CONTROL | 14912 | ■ | ■ | ■ |
| SERVICE PORT-EVAP | 14939 | ■ | ■ | ■ |
| ASSY-PURGE PUMP | 14941 | ■ | ■ | ■ |
| SCV SOLENOID VALVE | 14951 | ■ | ■ | ■ |
| POWER VALVE SOLENOID | 14952 | ■ | ■ | ■ |
| SOLENOID VALVE ASSY | 14955 | ■ | ■ | ■ |
| PURGE CONTROL | 14956 | ■ | ■ | ■ |
| EVAP VACUUM TANK | 14958 | ■ | ■ | ■ |
| EVAP CANISTER VENT | 14960 | ■ | ■ | ■ |
| THROTTLE CHAMBER | 16118 | ■ | ■ | ■ |
| PROTECTOR-FUEL,RAIL,LD-INJ HIGH PRESSURE | 16265 | ■ | ■ | ■ |
| FUEL PUMP ASSY - HIGH PRESSURE | 16630 | ■ | ■ | ■ |
| INSULATOR-FUEL,PUMP,HIGH PRESSURE | 16634 | ■ | ■ | ■ |
| FUEL PRESSURE SENSOR | 16637 | ■ | ■ | ■ |
| FUEL PUMP - IN TANK | 17040 | ■ | ■ | ■ |
| FUEL CONNECTOR | 17103 | ■ | ■ | ■ |
| THROTTLE CHAMBER | 17118 | ■ | ■ | ■ |
| FUEL TANK | 17201 | ■ | ■ | ■ |
| TUBE ASSY FILLER | 17220 | ■ | ■ | ■ |
| FUEL FILLER NECK | 17222 | ■ | ■ | ■ |
| FUEL FILLER CAP | 17251 | ■ | ■ | ■ |
| FUEL CHECK VALVE | 17330 | ■ | ■ | ■ |
| TUBE ASSY - FUEL FEED | 17502 | ■ | ■ | ■ |
| PROTECTOR-FUEL, RAIL | 17524 | ■ | ■ | ■ |
| UREA FILLER TUBE ASSY | 20421 | ■ | ■ | ■ |
| UREA FILLER HOSE ASSY | 20424 | ■ | ■ | ■ |
| UREA FLUID PUMP ASSY | 20440 | ■ | ■ | ■ |
| UREA TANK CONTROLLER ASSY | 20443 | ■ | ■ | ■ |
| UREA TANK CONTROLLER HARNESS | 20458 | ■ | ■ | ■ |
| WATER HOSE ASSY - INLET, AIR COOLER | 21518 | ■ | ■ | ■ |
| WATER HOSE ASSY - OUTLET, AIR COOLER | 21520 | ■ | ■ | ■ |
| DETONATION SENSOR | 22040 | ■ | ■ | ■ |
| VACUUM TANK | 22327 | ■ | ■ | ■ |
| VIAS VACUUM TANK ASSY | 22328 | ■ | ■ | ■ |
| CK SWITCH - CANISTER VAC CNTRL | 22360 | ■ | ■ | ■ |
| VACUUM SWITCH | 22361 | ■ | ■ | ■ |
| CONTROL UNIT - EFI | 22611 | ■ | ■ | ■ |
| BRACKET-ECM | 22612 | ■ | ■ | ■ |
| THROTTLE VALVE SWITCH | 22630 | ■ | ■ | ■ |
| EXHAUST GAS TEMP SENSOR | 22630 | ■ | ■ | ■ |
| AIR TEMPERATURE SENSOR | 22631 | ■ | ■ | ■ |
| CYLINDER HEAD TEMP SENSOR | 22632 | ■ | ■ | ■ |
| SENSOR-EXHAUST GAS TEMPERATURE | 22640 | ■ | ■ | ■ |
| AIR REGULATOR | 22660 | ■ | ■ | ■ |
| PRESSURE REGULATOR | 22670 | ■ | ■ | ■ |
| PRESSURE REG. CONTROL MODULE | 22671 | ■ | ■ | ■ |
| AIR FLOW METER | 22680 | ■ | ■ | ■ |
| AIR FLOW METER BRACKET | 22682 | ■ | ■ | ■ |
| VACUUM CONTROL VALVE | 22686 | ■ | ■ | ■ |
| O2 SENSOR | 22690 | ■ | ■ | ■ |
| REAR OXYGEN O2 SENSOR | 22691 | ■ | ■ | ■ |
| DROPPING RESISTOR | 22695 | ■ | ■ | ■ |
| MAIN & FUEL PUMP RELAY | 22697 | ■ | ■ | ■ |
| SENSOR ASSY - DPF PRESSURE | 22770 | ■ | ■ | ■ |
| SENSOR ASSY - NOX | 22790 | ■ | ■ | ■ |
| CRANK ANGLE SENSOR | 23730 | ■ | ■ | ■ |
| CRANK POSITION SENSOR-RING GEAR | 23733 | ■ | ■ | ■ |
| A.A.C. VALVE | 23781 | ■ | ■ | ■ |
| EFI HARNESS | 24011 | ■ | ■ | ■ |
| SOLENOID-COMPRESSOR BYPASS VALVE | 25679 | ■ | ■ | ■ |
| BASE ASSY-FUEL FILLER | 78120 | ■ | ■ | ■ |
| FUELING STOPPER ASSY | 78402 | ■ | ■ | ■ |
| HOUSING-STAGE2,FUEL FILTER | 78507 | ■ | ■ | ■ |
| HOUSING-FUEL FILTER | 78509 | ■ | ■ | ■ |
| SENSOR ASSY - DPF PM, REAR | 22743 | ■ | ■ | ■ |

HYBRID / ELECTRIC

| | | COLD Pref & W/rop | SILVER Pref | POWERTRAIN Pref CPO/Certified Select |
|--|-------|-------------------|-------------|---|
| INVERTER O-RING | 14457 | ■ | ■ | ■ |
| REAR AIR GUIDE ASSY-AIR COOLER COOLING RADATOR | 21463 | ■ | ■ | ■ |
| AIR GUIDE ASSY-SUB RADIATOR | 21464 | ■ | ■ | ■ |
| BRUSH-EARTH | 23390 | ■ | ■ | ■ |
| HYBRID VEH CNTRL, (ECU) | 23700 | ■ | ■ | ■ |
| EV DRIVE MOTOR CONTROL MODULE | 23740 | ■ | ■ | ■ |
| INVERTER CONTROL ASSY | 25333 | ■ | ■ | ■ |
| INVERTER CONTROL UNIT | 25334 | ■ | ■ | ■ |
| CONTROL ASSY-STARTUP SOUND | 28150 | ■ | ■ | ■ |
| TRACTION MOTOR ASSY | 29000 | ■ | ■ | ■ |
| BRUSH ASSY | 29017 | ■ | ■ | ■ |
| MOTOR ASSY-DRIVE,REAR | 29020 | ■ | ■ | ■ |
| INVERTER (PCU) | 29100 | ■ | ■ | ■ |
| INVERTER COMPL-POWER HEAD | 29101 | ■ | ■ | ■ |
| HOUSING ASSY-CONNECTOR | 29110 | ■ | ■ | ■ |
| INVERTER ASSY | 29111 | ■ | ■ | ■ |
| HARNESS ASSY-HIGH VOLTAGE | 29115 | ■ | ■ | ■ |
| INVERTER COVER BRACKET | 29153 | ■ | ■ | ■ |
| BOX ASSY-DC/DC | 29201 | ■ | ■ | ■ |
| POWER CONVERTER BOX ASSY | 29202 | ■ | ■ | ■ |
| CONVERTER ASSY | 29210 | ■ | ■ | ■ |
| COVER-PDM | 29230 | ■ | ■ | ■ |
| BATTERY CONTROLLER ASSY | 29300 | ■ | ■ | ■ |
| BATTERY CONTROL ASSY | 29310 | ■ | ■ | ■ |
| JUNCTION NO2 BOX ASSY | 29401 | ■ | ■ | ■ |
| JUNCTION BOX ASSY | 29410 | ■ | ■ | ■ |
| BATTERY COOLING FAN | 29500 | ■ | ■ | ■ |
| BUS BAR REAR MODULE | 29501 | ■ | ■ | ■ |
| SENSOR ASSY-BATTERY | 29502 | ■ | ■ | ■ |
| BATTERY SENSOR ASSY | 29504 | ■ | ■ | ■ |
| BUS BAR LH MODULE | 29505 | ■ | ■ | ■ |
| BUS BAR MAIN RH MODULE | 29506 | ■ | ■ | ■ |
| BATTERY COOLER | 29512 | ■ | ■ | ■ |
| BATTERY CONNECTOR BASE | 29531 | ■ | ■ | ■ |
| CHARGER ASSY-BATTERY | 29610 | ■ | ■ | ■ |
| BATTERY CHARGE PORT UNIT | 29612 | ■ | ■ | ■ |
| CELL, MODULE SOLAR | 29620 | ■ | ■ | ■ |
| EVSE PACKAGE | 29621 | ■ | ■ | ■ |
| INSULATOR | 29640 | ■ | ■ | ■ |
| SWICH - DISCONNECT SERVICE | 29701 | ■ | ■ | ■ |
| CABLE POWER CONN TO LH ON PAK | 29702 | ■ | ■ | ■ |
| CABLE (ON BOARD CHARGER TO DC/DC-I/B) | 29703 | ■ | ■ | ■ |
| SW-DISCONNECT SERVICE | 29717 | ■ | ■ | ■ |
| BATTERY UPPER COOLING DUCT | 29714 | ■ | ■ | ■ |
| BATTERY LOWER COOLING DUCT | 29715 | ■ | ■ | ■ |
| BATTERY SIDE COOLING DUCT | 29716 | ■ | ■ | ■ |
| BATTERY COOLING DUCT | 29717 | ■ | ■ | ■ |
| BRUSH AXLE & MOTOR GENERATOR | 30051 | ■ | ■ | ■ |
| OIL PUMP & MOTOR ASSY | 31337 | ■ | ■ | ■ |
| LEVER | 31965 | ■ | ■ | ■ |
| MANUAL TRANSMISSION ASSY / REDUCER | 32010 | ■ | ■ | ■ |
| BATTERY FAN INLET DUCT | 96712 | ■ | ■ | ■ |
| BATTERY COOLING DUCT INLET | 96713 | ■ | ■ | ■ |
| WATER TUBE ASSY - FLOOR,REAR | 21630 | ■ | ■ | ■ |
| WATER HOSE - DRIVE MOTOR,REAR | 21531 | ■ | ■ | ■ |
| WATER HOSE-TRACTION MOTOR,REAR | 21555 | ■ | ■ | ■ |
| WATER HOSE-TRACTION MOTOR,FRONT | 21556 | ■ | ■ | ■ |
| WATER HOSE-TRACTION MOTOR CENTER | 21557 | ■ | ■ | ■ |
| WATER TUBE-TRACTION MOTOR REAR | 21558 | ■ | ■ | ■ |
| WATER TUBE-TRACTION MOTOR CENTER | 21559 | ■ | ■ | ■ |

INFOTAINMENT

| | | COLD Pref & W/rop | SILVER Pref | POWERTRAIN Pref CPO/Certified Select |
|---------------------------------|-------|-------------------|-------------|---|
| WATER TUBE-TRACTION MOTOR FRONT | 21560 | ■ | ■ | ■ |
| EV CONTROL BRACKET | 23071 | ■ | ■ | ■ |
| GASKET | 29049 | ■ | ■ | ■ |
| TRACTION MOTOR TERMINAL COVER | 29075 | ■ | ■ | ■ |
| BRUSH-EARTH | 29077 | ■ | ■ | ■ |
| TRACTION MOTOR ASSY-WATER INLET | 29075 | ■ | ■ | ■ |
| O-RING SEAL | 29076 | ■ | ■ | ■ |
| POWER HEAD INVERTER SEAL | 29160 | ■ | ■ | ■ |
| GUSSET | 29161 | ■ | ■ | ■ |
| INVERTER COVER | 29162 | ■ | ■ | ■ |
| POWER CONVERTER BOX ASSY | 29242 | ■ | ■ | ■ |
| POWER DELIVERY MODULE | 29240 | ■ | ■ | ■ |
| CABLE ASSY INTJCN TO PWR HEAD | 29760 | ■ | ■ | ■ |
| CELL PHONE SWITCH | 18931 | ■ | ■ | ■ |
| REAR WINDOW ANTENNA AMP | 25190 | ■ | ■ | ■ |
| RELAY-AUDIO AMP | 25198 | ■ | ■ | ■ |
| NAVI SPEAKER RELAY | 25273 | ■ | ■ | ■ |
| CONTROL ASSY-T MASTER | 25914 | ■ | ■ | ■ |
| NAVI GPS ANTENNA ASSY | 25957 | ■ | ■ | ■ |
| AUX JACK-AUDIO | 26823 | ■ | | |